



PREPARING & USING YOUR NINJA® COFFEE BREWER

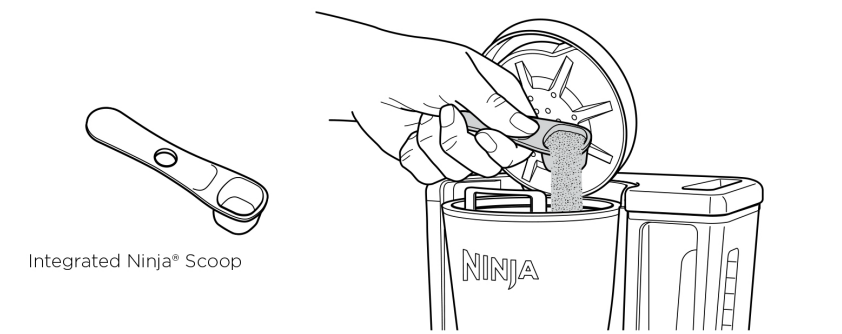

COFFEE MEASUREMENT CHART

BATCH SIZE	CUPS OF COFFEE	GROUND	WATER
Small Batch (SMALL BATCH button on)	2 cups	2 Ninja Scoops or 2 tbsp.	2-cup line
	4 cups	4 Ninja Scoops or 4 tbsp.	4-cup line
Full Carafe (SMALL BATCH button off)	6 cups	6 Ninja Scoops or 6 tbsp.	6-cup line
	8 cups	8 Ninja Scoops or 8 tbsp.	8-cup line
	10 cups	10 Ninja Scoops or 10 tbsp.	10-cup line
	12 cups	12 Ninja Scoops or 12 tbsp.	12-cup line

Integrated Ninja Scoop is equivalent to 1 tbsp. of coffee.

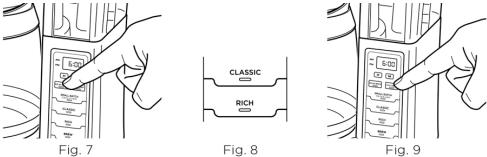

PROGRAMMING THE DELAY BREW TIME

- With Power on, press DELAY BREW. The DELAY BREW button will illuminate and the clock will flash “12:00” or the last Delay Brew time that was set (**Fig. 7**).
- While the clock is flashing, use the H and M buttons to set the time you would like the Delay Brew to begin. The AM or PM indicator will illuminate on the left side of the display as you are setting the desired time.
- Select desired brew style and selection will illuminate (**Fig. 8**).
- Once the time, brew size, and brew type have been set, press the DELAY BREW button again to activate, or wait five seconds for the brew time to lock in automatically. The unit will beep to indicate the brew time has been set, and the DELAY BREW button will remain illuminated.

NOTE: To deactivate the Delay Brew cycle, press the DELAY BREW button once more and the light on the button will turn off. Any change to the selected brew size or starting any other brew will cancel the programmed Delay Brew. Turning off the unit will also cancel the Delay Brew.

- Place the carafe under brew basket.

NOTE: The Ninja® Coffee Brewer must remain on for the Delay Brew function to work. **DO NOT** power off after setting the Delay Brew time.

PRECISION TEMP WARMING PLATE

The warming plate will turn on once the brew has started. Press the STAY WARM button after the brew to turn off the warming plate (**Fig. 9**). You can turn the warming plate back on by pressing the STAY WARM button again. Wait until surface has cooled completely before touching.

NOTE: DO NOT add additional water to the reservoir when using the STAY WARM function.

You can program the warming plate to stay on for up to 4 hours.

- Press and hold STAY WARM button until the clock flashes, displaying the time at which the warming plate is currently set to turn off.
- Quickly press the hour (H) or minute (M) button to adjust the time up to 4 hours. The warming plate is automatically programmed to stay on for 2:00 hours.
- To lock in the new duration, press the STAY WARM button again, or wait 5 seconds for it to lock in automatically.

CARE & MAINTENANCE

CLEANING AFTER A BREW

- After each brew is complete and the coffee grounds have cooled, discard the paper filter. Take out the removable filter holder, rinse, and wash with soap and warm water.

NOTE: If coffee grounds spill over into the filter holder, remove the filter holder and rinse it.

- We recommend cleaning your carafe with warm, soapy water, or placing it on the top rack of your dishwasher. If you want to clean the carafe more thoroughly, we recommend using a soft foam brush such as the one shown to the right.
 - Empty the water reservoir.
 - Hand-wash with dish soap and rinse or place on the top rack of your dishwasher.
- Unplug your unit and let the warming plate cool before cleaning. Wipe down with a soft cloth and warm water. **DO NOT** immerse the base in water.



DESCALING YOUR NINJA® COFFEE BREWER

- Use a descaling solution specifically formulated for coffeemaker cleaning and follow the directions on the package. Fill the water reservoir up to, but not exceeding, the 12-Cup Line (60 fl. oz.).

OR

Add 16 oz. of white vinegar to the water reservoir, then fill the rest of the reservoir with water up to, but not exceeding, the 12-Cup Line (60 fl. oz.).

- Once the water reservoir is filled with your cleaning solution or vinegar mixture, press the CLEAN button. The clean cycle takes approximately 25–35 minutes. To cancel the clean cycle, either press the CLEAN button again or press the Power button.
- The unit will beep when the clean cycle successfully completes. Refill the reservoir with fresh water up to, but not exceeding, the 12-Cup Line, and set the empty carafe beneath the brew basket. Run a full Classic Brew cycle with water only to remove any cleaning solution that could affect the flavor of your coffee.

NOTE: Make sure the SMALL BATCH button is not selected/illuminated and set the empty carafe beneath the brew basket.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

SharkNinja Operating LLC

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA and THERMAL FLAVOR EXTRACTION are registered trademarks of SharkNinja Operating LLC.

For SharkNinja U.S. Patent information, visit sharkninja.com/uspatents.

© 2018 SharkNinja Operating LLC



804109332A

PRINTED IN MEXICO Elbrd: Y.T.
OBPN: CE200_Series_IB_E_MP_180427
SC: 05-04-2019_TAB MODEL: CE251
REV 2: 11-03-2021

TROUBLESHOOTING GUIDE

There is sediment in my coffee.

- To reduce the amount of sediment in the brewed coffee, use a slightly coarser grind.

There are grounds in my coffee.

- Either the paper filter must be in place when brewing.
- Using too many grounds can cause the filter holder to overflow. Once cooled, clean out the filter holder and refill using the appropriate amount of coffee (1 scoop per cup).
- Finely ground coffee can clog the filter holder. For best brewing results, use a medium-grind coffee.

Brew basket drips even after the brew cycle is completed.

- The removable filter holder valve may be clogged. Rinse the filter holder with tap water and press the valve repeatedly until the clog is cleared.

Paper filter is folding over.

- The unit is designed to take a #4 cone filter. Be sure you are using this size and shape, as larger sizes may fold over. Allow the filter holder to cool before handling. Be sure the paper filter is folded along its two seams and is pressed firmly into the filter holder. Alternatively, you can wet the sides of the paper filter to temporarily adhere it to the filter holder.

NOTE: When using a paper filter.

What impacts coffee brew volume?

- When you make hot coffee, the coffee grounds will absorb some of the water that is brewed, resulting in slightly less brewed coffee than amount of water used. The more coffee you use, the more water will be absorbed.

Coffee is weak

- If you want an even bolder flavor, you can add more coffee grounds. Additional grounds do absorb water, so you may get more concentrated coffee but overall less liquid volume.

Coffee is strong

- For milder coffee, try the Classic Brew setting using light-roast grounds. If you want an even milder flavor, you can put fewer grounds in the filter holder.

Brew will not start.

NOTE: The brew will begin, pause, and then continue. This process is used to evenly saturate the coffee grounds.

- Ensure the unit is powered on and the display is illuminated. If there are no lights, the machine is not getting power. Try a different outlet and press the Power button.
- Check to make sure there is water in the water reservoir.
- Make sure the carafe is in place. The brewer will not dispense coffee if the carafe is not in place. If it is not in place, the brew will remain in the brew basket, which could lead to overflow.
- If the brew still does not start, it may be time to run a clean cycle. Please refer to the Descaling Your Ninja® Coffee Brewer section.

Brew cycle is too slow.

- A full carafe brew will take approximately 12–15 minutes. If a full carafe brew takes longer than expected, you may need to descale your unit.

Carafe overflowed.

- The carafe may not have been empty prior to brewing, or the water level exceeded the Max Fill line on the water reservoir prior to brewing. Reminder, do not add additional water to the reservoir after a brew or cleaning cycle has already started.
- For Classic brew, the carafe holds 60 fl. oz. To avoid overflows, make sure carafe is empty prior to brewing and the water reservoir is not filled past the 12-Cup Line.

Brew basket overflowed.

- Check that the carafe is in place with the lid secured. If the carafe is in place, the bottom of the filter holder may be clogged. This can happen with finely ground coffee or too many coffee grounds in the filter holder. Wash brew basket pieces per the Care & Maintenance instructions
- Medium-grind coffee is recommended.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner’s manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to **www.ConsumerServiceRefurbish.com** or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 9043 Siempre Viva Rd Suite 110/120, San Diego CA, 92154

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner’s Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____